direct connect to kitchen faucet

Filter Replacement (every 6 months)

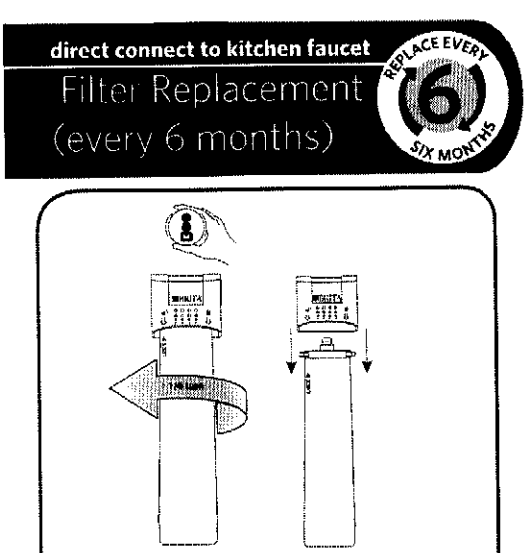

For FREE Filter Replacement Reminder, go to **www.protectplus.com**

Note: Place paper towels or rag under the filter system to catch any water drips.

- Using the Filter Housing Wrench, turn the filter right to left until it releases. Remove and discard used filter.
- Flush the filter with running water for approximately 10 minutes. See step 3 for details.
- See page 8 for inserting new filter.
- Note date filter is installed on cartridge tank label.

direct connect to kitchen faucet

Use and Care

Brita® Redi-Twist™ Filtration System USS-301

Usage and quality of water in your incoming water line affect the life of filter cartridges. Cartridges should be replaced sooner if water pressure at the faucet begins to drop noticeably or if the filter fails to perform satisfactorily.

Changing water filter on a regular basis ensures optimum performance of the water filtration system.

After prolonged periods of non-use, it is recommended that the filter system be flushed thoroughly. Let water run for 10 minutes before using.

The Redi-Twist™ filter used with this filter system has a limited service life. Changes in taste, odor, and/or flow of the water being filtered indicate that the filter should be replaced.

Please see the Performance Data Sheet for the certified performance of specific systems with stated cartridges.

System	Filter Model Numbers
USS-301 Redi-Twist™ Drinking Water Filtration System	USF-201 - Level 1 filter (included with system) Capacity: 2,000 gallons
Replace filters every six months or when capacity is reached.	USF-202 - Level 2 filter Capacity: 500 gallons

Replacement Parts Part Number	Description
WFBAS-300	Mounting Screws (Package of 2)
WFBAF-850	Dual Port Kitchen Faucet Adapter
WFBAF-375	3/8" Plastic Tubing
WFBAF-100	Redi-Twist™ System Head
FCT-102	Filtered Water Faucet - Chrome